






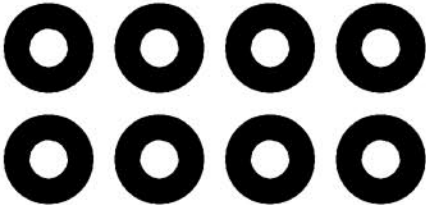

PRODUCT NAME : PEACOCK ACCENT CHAIR

ITEM NUMBER : 178316


DIMENSIONS : 28"(L) X 33"(W) X 34"(H)

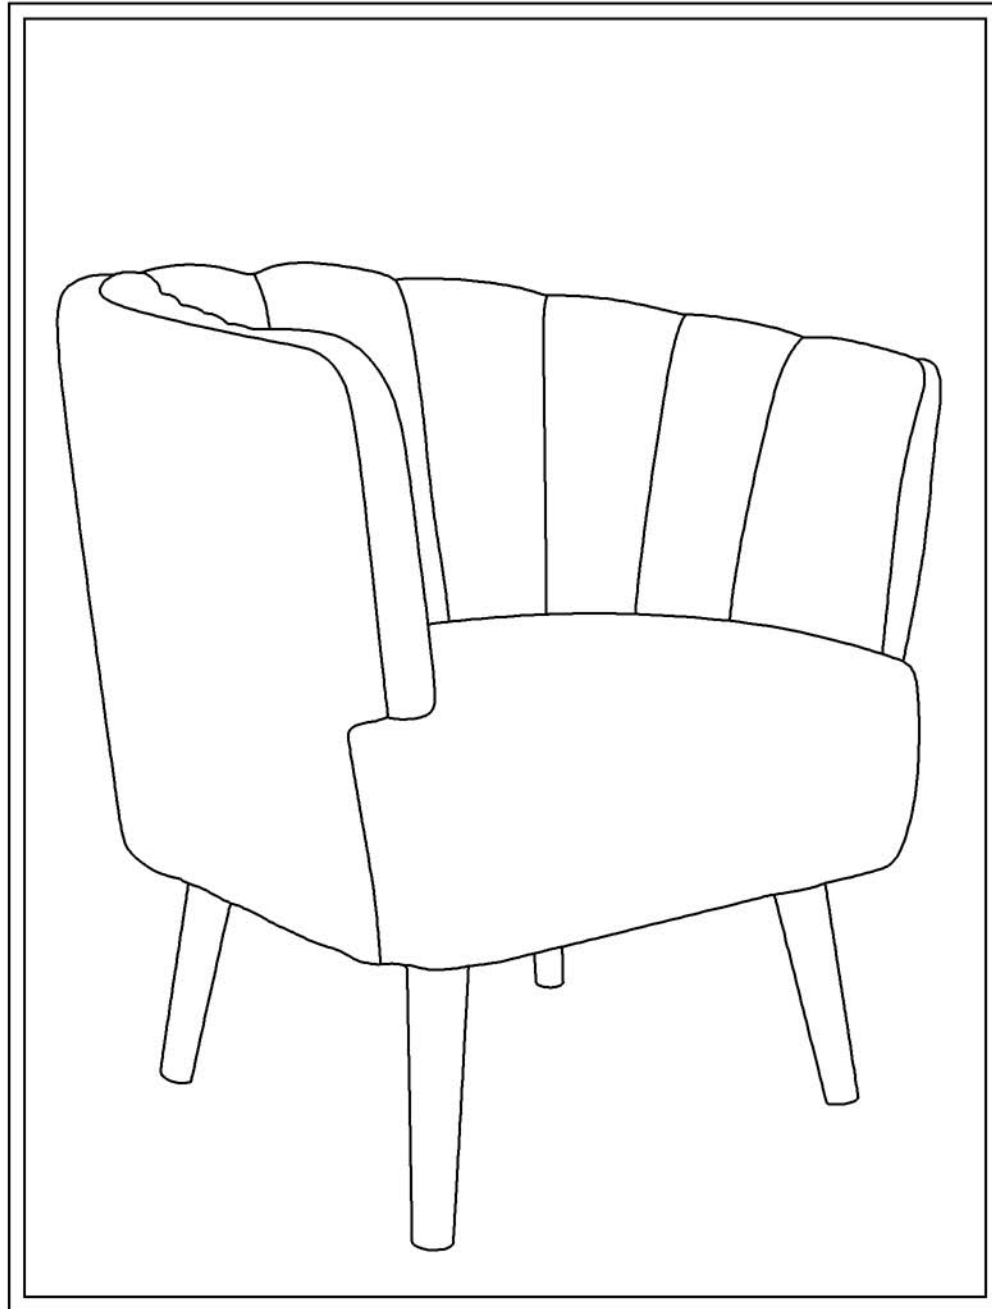


Tools needed : Tools needed for assembly
 Follow the instructions below.

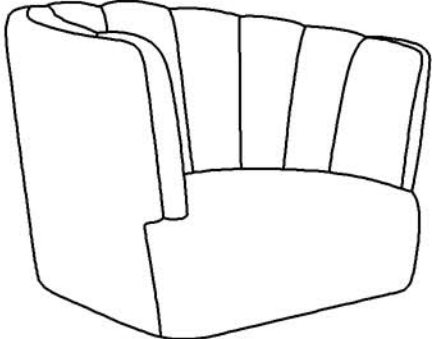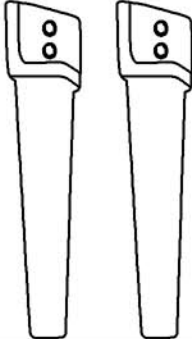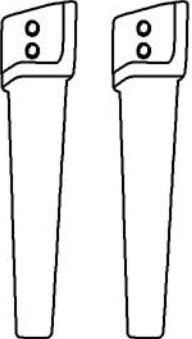Ltr.	Qty.	Components
A	1	 <p style="text-align: right;">Chair</p>
B	4	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Front legs</p> </div> <div style="text-align: center;">  <p>Back legs</p> </div> </div>
C	8	 <p style="text-align: right;">Screw</p>
D	8	 <p style="text-align: right;">Flat washer</p>
E	1	 <p style="text-align: right;">Allen Key</p>


STEP 1 : Collect the parts mention in assembly instruction and keep together.
Upside down the chair on clean carpet surface.

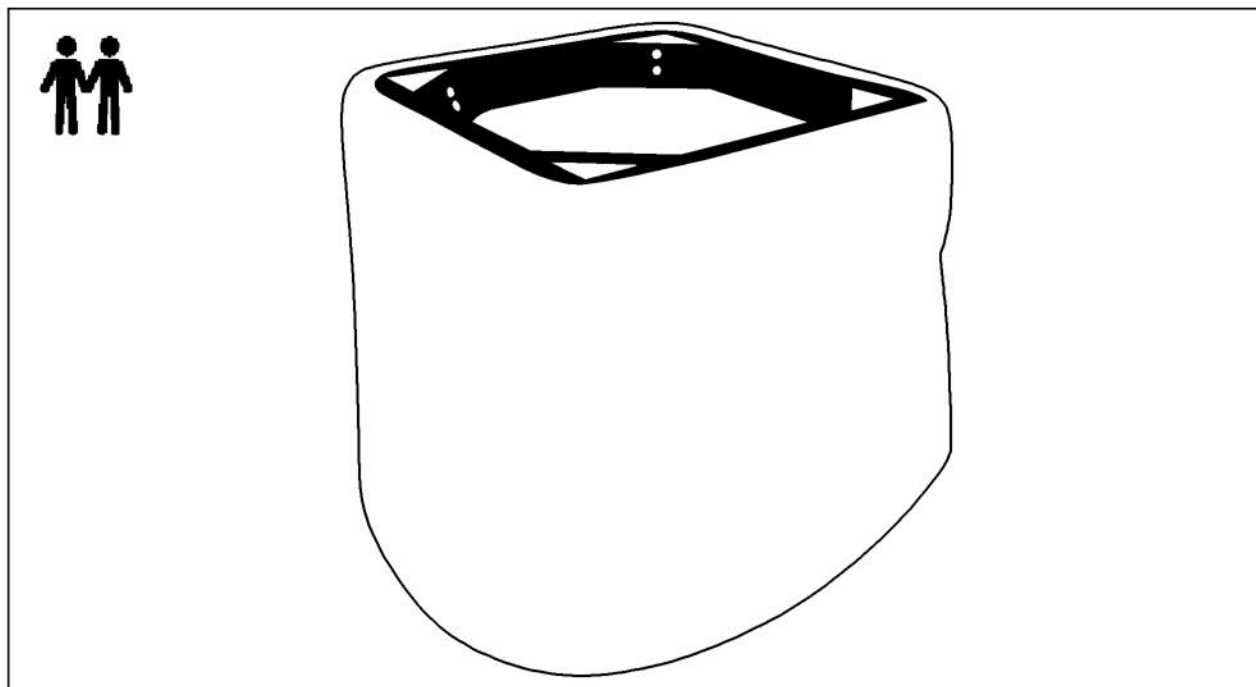


STEP 2 : Align the back legs with bottom hole and tighten the screws clock wise with help of allen key.

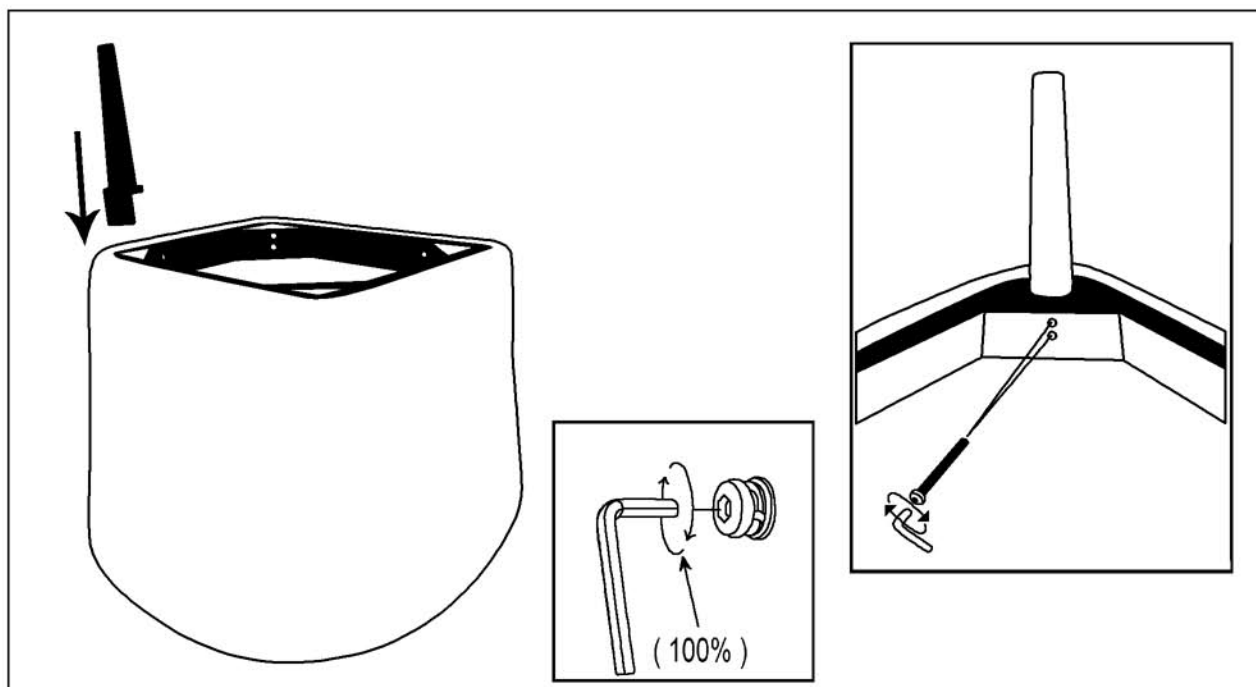

Step 3 : Align the front legs with bottom hole and tighten the screws clock wise with help of allen key.

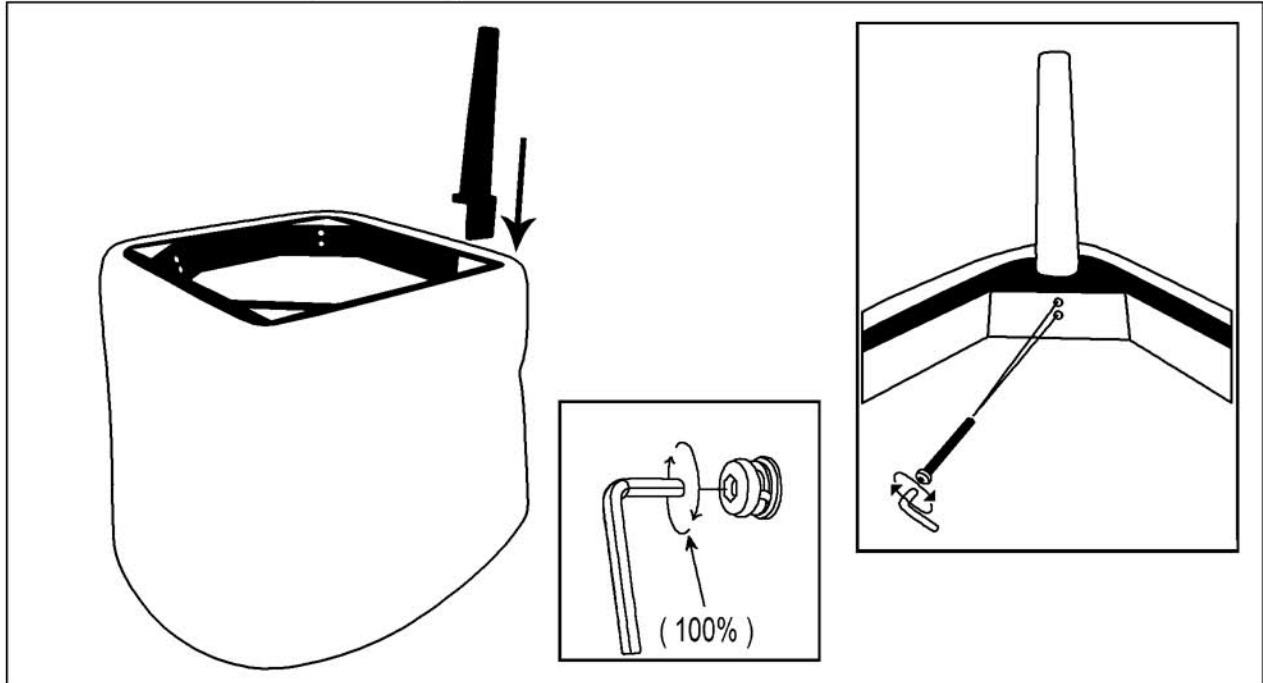

Step 4 : Assembly completed.

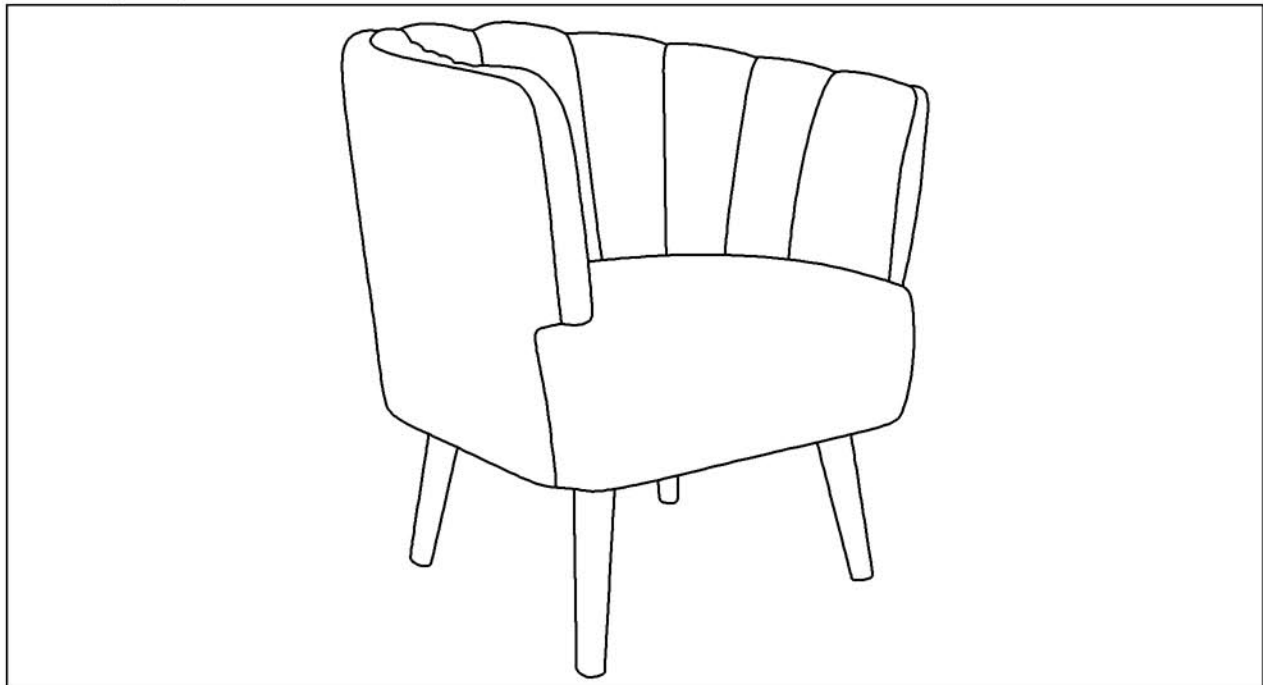

Cleaning & Care:

Clean with soft cloth.
Do not use abrasive cleaners, chemical cleaners
or metal polishes.

Please contact one of our product specialists for assembly assistance or questions at 1-800-491-4958
Specialists are available week days from 8 am to 8 pm EST or
Saturday from 9:30 am to 6:30 pm.