

grandinroad[®]

PRODUCT NAME: Animated Floating Broom
ITEM NUMBER: 168055
DIMENSIONS OF ITEM ASSEMBLED: H49.5" X W13" X D13"

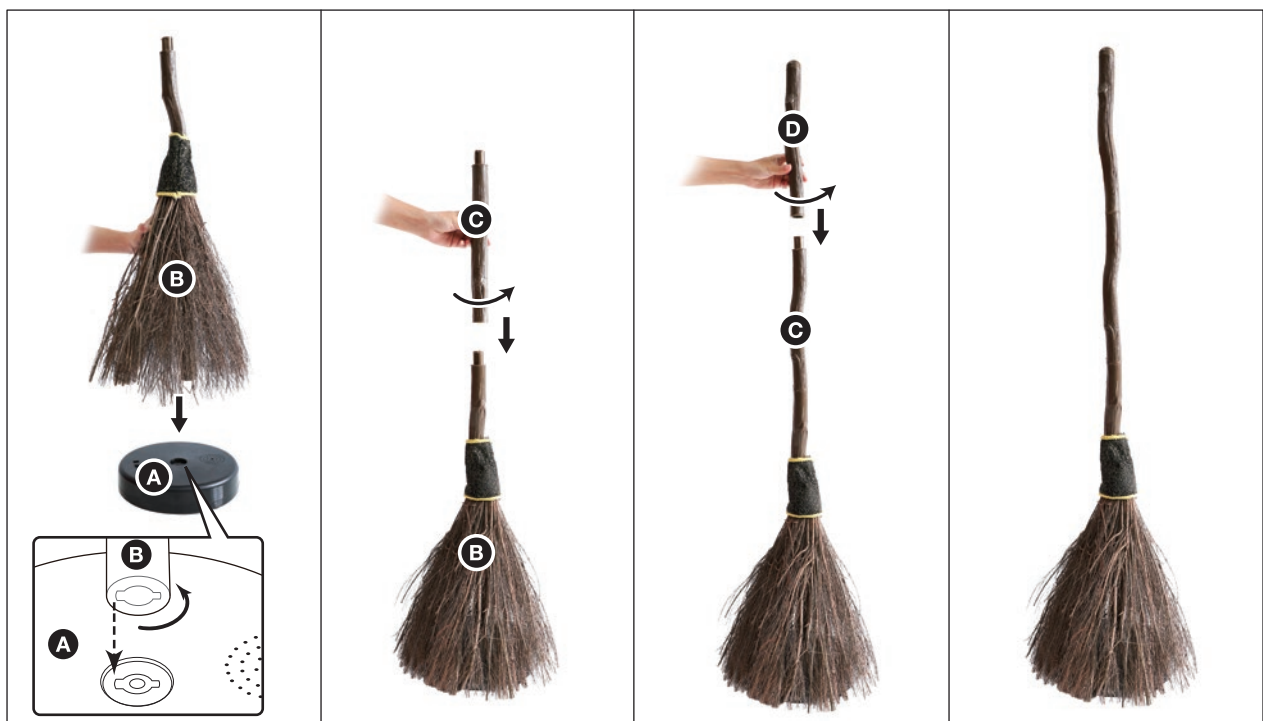


Chart listing all hardware as well as the individual components that are included with piece.
Assign each piece a letter and list quantity.

Ltr.	Qty.	Components
A	1	
B	1	
C	1	
D	1	

PARTS LIST
 A. Moving Platform
 B. Broom Bristles
 C. Middle Broomstick
 D. Top Broomstick

STEP 1: Insert the bottom part of the (B) Broom Bristles into the (A) Moving Platform by aligning the hole shape with the protrusion in the (A) Moving Platform. Be sure that the small and larger parts of the protrusion fit into their corresponding place in the (B) Broom Bristles and then twist to lock in place. Insert the (C) Middle Broomstick into the housing available at the top of the (B) Broom Bristles and twist to lock in place. Then insert the (D) Top Broomstick into the housing available at the top of the (C) Middle Broomstick and twist to lock in place as shown. Your Animated Floating Broom is now fully assembled. Insert fresh batteries and turn on to let the fun begin!



OPERATION INSTRUCTIONS

Remove the Battery cover from the Battery box to install or replace batteries and to adjust operational settings.

ON

This switch mode activates the item's sound sensor. Once the sensor is triggered, the Animated Floating Broom will move around the floor, change directions once it bumps into anything, and will play sounds for 30 seconds before deactivating.

OFF

This switch mode deactivates the sound sensor and disables movement and sound.



Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

BATTERY REPLACEMENT INSTRUCTIONS

* Requires 4 x AA (1.5V) batteries (Not Included).

* You will need a small Phillips head screwdriver (Not Included).

Remove safety screw with screwdriver, slide battery cover to open, insert new batteries observing correct polarity, replace the lid and screw - do not over tighten screw.

WARNINGS & CAUTIONS

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries are to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if consumed or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. **DO NOT DISPOSE OF BATTERIES IN FIRE; BATTERIES MAY EXPLODE OR LEAK.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.
CAN ICES-003 (B)/ NMB-003 (B)

THIS IS NOT A TOY. FOR INDOOR DECORATIVE USE ONLY.

Responsible party for FCC SdoC:
Seasonal Visions International, Berkeley, CA 94710 USA
Tel: 1-855-428-3921

Customer Service: 1-800-491-4958
Online: ps@grandinroad.com

